

Experience the change - the quick and safe change:



Open the housing with a customary screw driver (1).



Disconnect the sensor cable and unscrew the disused sensor cartridge (2).

The yellow LED lights up.



Change the sensor cartridge (3).



Connect the cable of the recalibrated cartridge to the PCB (4).

The yellow LED goes off again.

Close the cover of the housing (1) again and the recalibrated sensor is immediately ready for use.